


~~CROSLEY~~ CR6010 COLLEGIATE USB RECORD PLAYER



Step 1: Unplug the turntable and remove the lid. Position the turntable with the tone-arm side facing the front.



Step 2: Lift the tone-arm side of the turntable high enough to see the chrome screw.

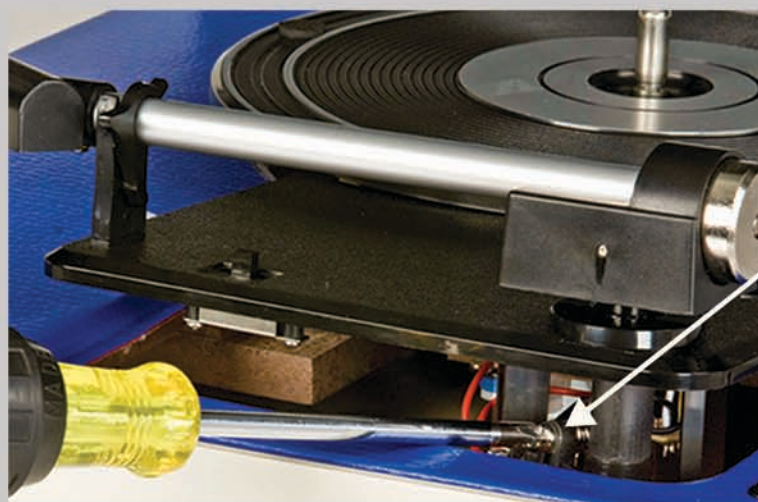

Step 3: Using a Phillips head screw driver, turn the chrome screw **COUNTER-CLOCKWISE** in half turn increments to extend the playing time.