

WARRANTY

Crosley Radio Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale to the original purchaser.

Should the unit fail under normal usage during the 90 day warranty period, a request for RETURN AUTHORIZATION (R.A.) must be made by the original customer before returning the unit. Call Crosley Radio customer service for Return Authorization at (502) 583-4246 from 9 AM to 5 PM (EST) Monday to Friday.

Upon receiving the RETURN AUTHORIZATION number from the Customer Service Department, properly pack your unit in its original packaging. Include any adapters, parts, & accessories which were originally provided with the product, along with a check or money order for \$19.95 made out to Crosley Radio to cover the handling and return postage. Display the R.A. # on the outside of the carton and ship PREPAID via standard UPS or its equivalent.

CROSLEY
RADIO

ATTN: RETURNS DEPT
2001 PRODUCTION DRIVE
BAY 2 & 3
LOUISVILLE, KY 40299

CROSLEY RADIO assumes no responsibility for units sent without prior Return Authorization.

The purchaser's bill of sale is the only proof of warranty entitlement and must accompany the unit.

The warranty does not cover damage due to acts of nature, accident, misuse, abuse, negligence, commercial use or modification of, or to any part of the product. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Crosley Radio to service the product. This warranty does not cover products sold AS IS or consumables (such as fuses or batteries). This warranty is valid only in the United States.


This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Radio, high standards of Quality and Workmanship.

CROSLEY
RADIO



ST66

 Entertainment Center Stand

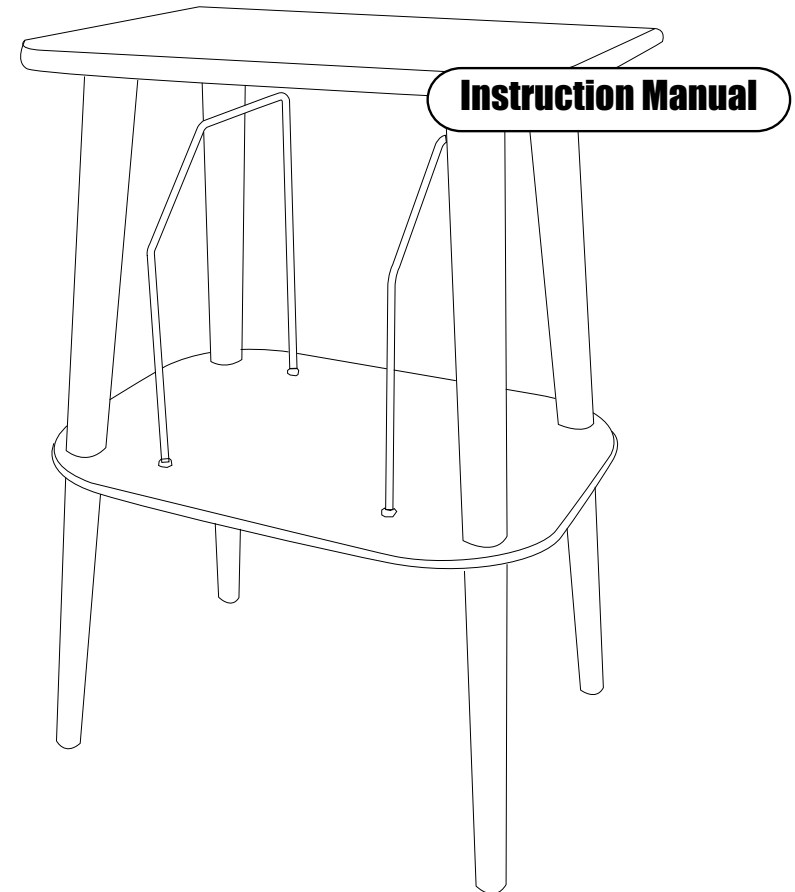

ASSEMBLY INSTRUCTION

  1. Remove all parts from box.
2. Lay top of stand with the bottom side up on a soft surface to avoid scratching top.
3. Screw 4 upper legs into place.
4. Position base on top of the 4 upper legs with the bottom side up.
5. Screw 4 lower legs into place.
6. Thread one(1) nut on each threaded end of the metal dividers. You will use four(4) nuts total in this step.
7. Place the metal dividers through the holes in the base with the angles side of the dividers towards the front of the stand.
8. Thread one(1) nut on each threaded end of the metal dividers to hold the dividers into place.

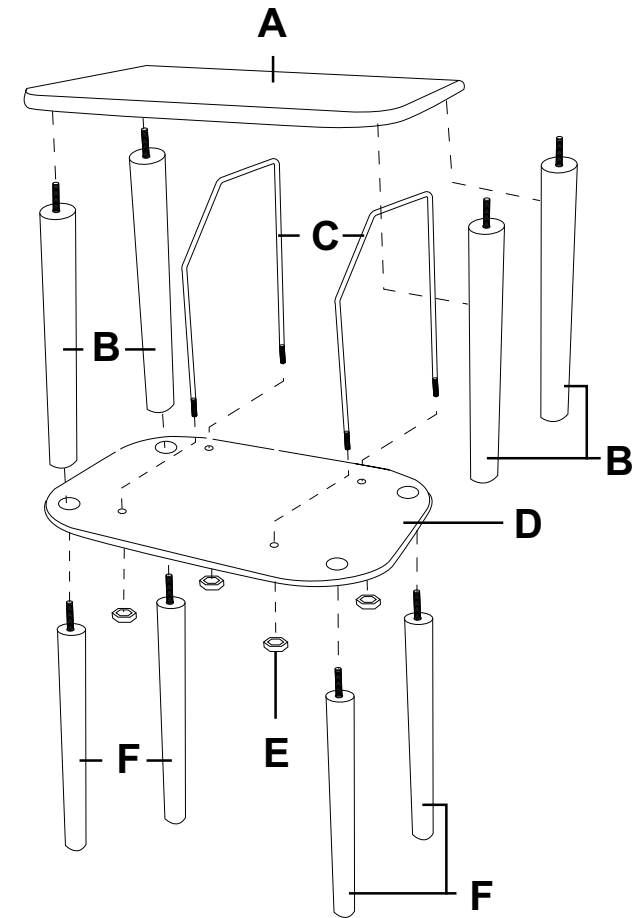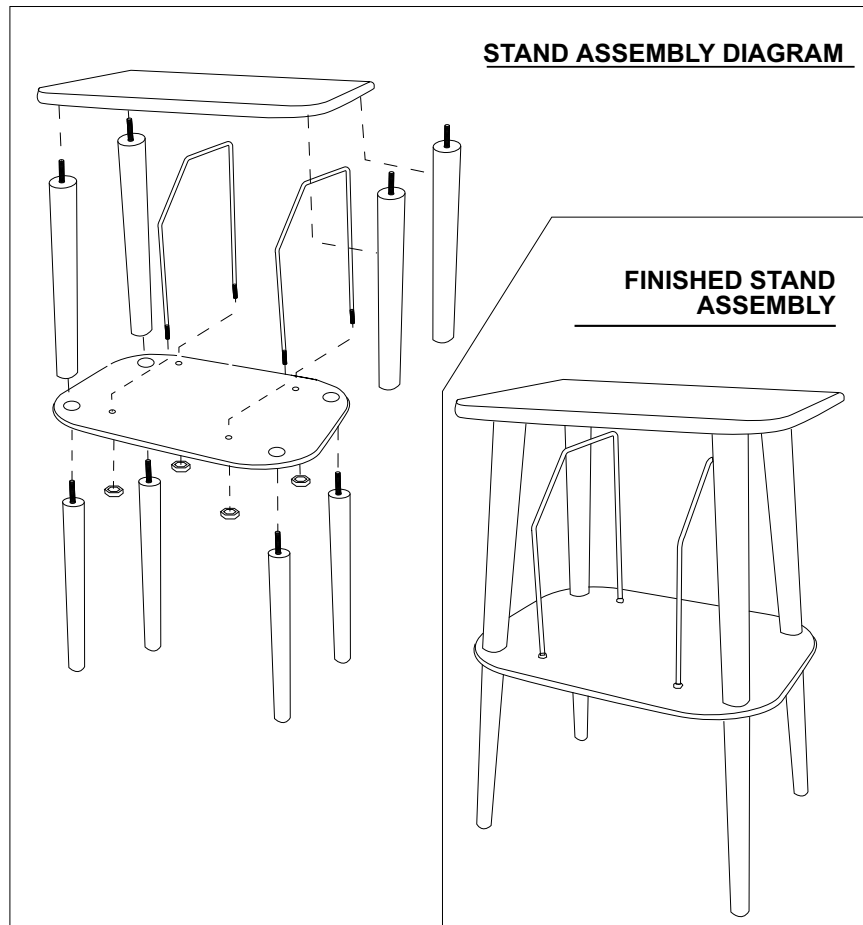

PARTS	QTY.
A. Top	1
B. Upper Legs	4
C. Metal Dividers	2
D. Base	1
E. Nuts	8
F. Lower Legs	4